

5-Port VPN Security Router

VR-100 & VR-300 Series

Quick Installation Guide

Table of Contents

1. Package Contents	3
2. Hardware Installation	5
2.1 Wireless Antennas Installation.....	5
2.2 SIM Card Installation	6
2.3 5G NR Antenna Installation.....	7
3. Setup of The VPN Router	8
3.1 Requirements	8
3.2 Logging in to the VPN Router.....	8
4. Recovering Back to Default Configuration.....	13
5. Appendix	14
6. Further Information	15

1. Package Contents

Thank you for purchasing PLANET VPN Router, VR-100 or VR-300 Series. The descriptions of these models are as follows:

VR-100	5-Port 10/100/1000T VPN Security Router
VR-300	Enterprise 5-Port 10/100/1000T VPN Security Router
VR-300P	Enterprise 4-Port 10/100/1000T 802.3at PoE + 1-Port 10/100/1000T VPN Security Router
VR-300W5	Wi-Fi 5 AC1200 Dual Band VPN Security Router
VR-300PW5	Wi-Fi 5 AC1200 Dual Band VPN Security Router with 4-Port 802.3at PoE+
VR-300W6	Wi-Fi 6 AX1800 Dual Band VPN Security Router
VR-300PW6	Wi-Fi 6 AX1800 Dual Band VPN Security Router with 4-Port 802.3at PoE+
VR-300W6A	Wi-Fi 6 AX2400 2.4GHz/5GHz VPN Security Router
VR-300PW6A	Wi-Fi 6 AX2400 2.4GHz/5GHz VPN Security Router with 4-Port 802.3at PoE+
VR-300FW-NR	5G NR Cellular + Wi-Fi 6 AX 1800 Dual Band + 1-Port 1000X SFP VPN Security Router

“VPN Router” mentioned in this Quick Installation Guide refers to the above models. “Wireless Router” is for the above router with wireless interface.

Open the box of the VPN Router and carefully unpack it. The box should contain the following items for each of the above models:

- VPN Router x 1
- Quick Installation Guide (QR code) x 1
- Power Cord x 1
- Rubber Feet x 4
- Rack-mounting Kit x 1
- SFP Dust Cap x 1 (VR-300F/VR-300FP/VR-300FW-NR)
- Other components as shown below:

Model Name	2.4G/5G antenna	Dual band antenna	5G NR antenna
VR-300W5	2	--	--
VR-300PW5	2	--	--
VR-300W6	--	2	--
VR-300PW6	--	2	--
VR-300W6A	--	4	--
VR-300PW6A	--	4	--
VR-300FW-NR	--	2	4

If any of the above items are damaged or missing, please contact your dealer immediately.

2. Hardware Installation

Refer to the illustration and follow the simple steps below to quickly install your VPN router.


2.1 Wireless Antennas Installation

Step 1: For wireless models, fasten the 2.4G/5G antennas to the 2.4G/5G antenna connectors. And you can bend the antennas to fit your actual needs.

VR-300W/VR-300PW Series Rear View:



VR-300FW-NR Rear View:

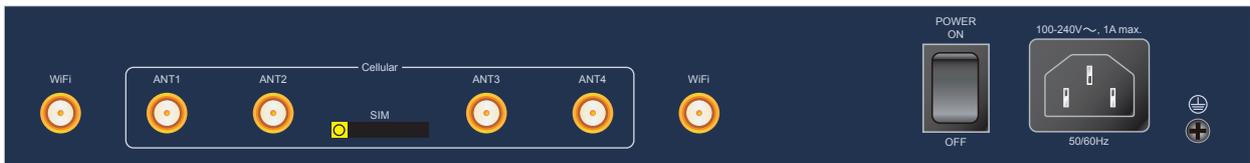

Step 2: Place the VPN Router on desktop.

Step 3: Keep enough ventilation space between the VPN Router and the surrounding objects.



Note

When choosing a location, please keep in mind the environmental restrictions should be under the specifications of the VPN router.

Step 4: Connect your VPN Router to hub/switch.

- A. Connect one end of a standard network cable to the LAN port (port 1) on the front panel of the VPN router.
- B. Connect the other end of the cable to the hub/switch.



Note

The UTP Category 5e/6 network cabling with RJ45 tips is recommended.

Step 5: Connect your VPN Router to internet.

- A. Connect one end of a standard network cable to the WAN port (port 5) on the front panel of the VPN router.
- B. Connect the other end of the cable to the xDSL/x PON modem/ONU LAN port or an upper layer port to outer network layer.



Note

If there is only one line connected to the outer network in your network environment, it is suggested that you use WAN port (port 5).

Step 6: Connect the included power cord to an AC 100-240V wall outlet. When the VPN router receives power, the Power LED should remain solid green.

2.2 SIM Card Installation

For VR-300FW-NR only


- A. Insert an ejector pin into the yellow button next to the tray to loosen the tray.



B. Pull out the tray gently from the tray slot. Place the SIM card on the tray with the gold-colored contacts facing upwards.

C. Insert the tray back into the tray slot.

- A mini SIM card with 5G NR and 4G LTE subscription

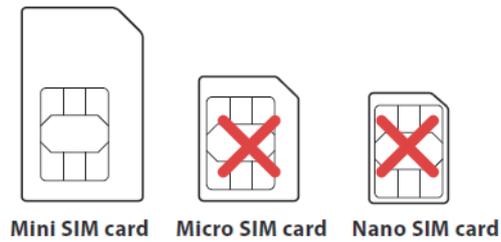

2.3 5G NR Antenna Installation

For VR-300FW-NR only

Step 1: Connect 5G NR antennas to the 5G NR antenna extender.



3. Setup of The VPN Router

3.1 Requirements

Please confirm the following items before configuration:

1. Test your network connection by connecting your computer directly to ISP.
2. Suggested operating systems: Windows 7/8/11.
3. Recommended web browsers: Edge/Firefox/Chrome.

3.2 Logging in to the VPN Router

Then refer to the steps to configure the VPN Router:

Step 1: Connect the IT administrator's PC and VPN router's LAN port (port 1) to the same hub/switch, and then launch a browser to link the management interface address which is set to **https://192.168.1.1** by default.

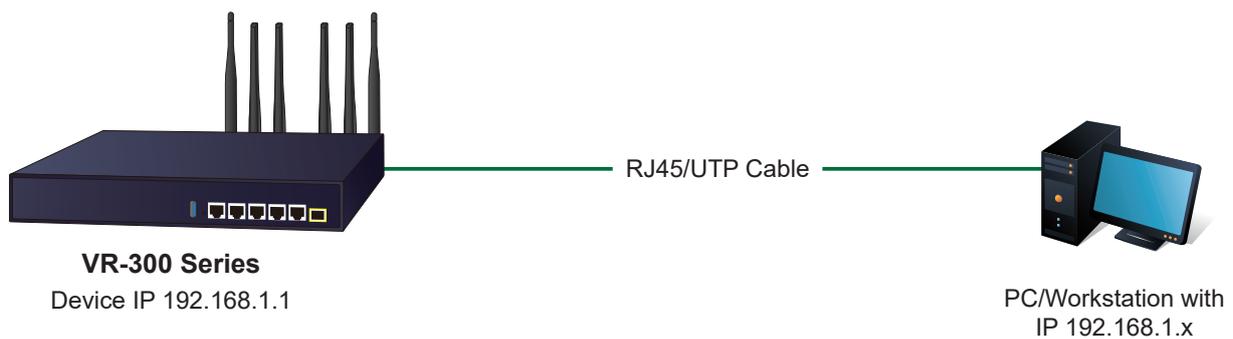


Figure 3-1: IP Management Diagram



Note

The DHCP server of the VPN Router is enabled. Therefore, the LAN PC will get IP from the VPN Router. If user needs to set IP address of LAN PC manually, please set the IP address within the range between 192.168.1.2 and 192.168.1.254 inclusively, and assign the subnet mask of 255.255.255.0.

Step 2: The browser prompts you for the login credentials. (Both are “**admin**” by default.)



Note

The following password is based on firmware versions before **v1.2102b240829**.

Default IP address: **192.168.1.1**

Default user name: **admin**

Default password: **admin**

Default DHCP Server: **ON**

<Wireless Router>

Default SSID (2.4G): **PLANET_2.4G**

Default SSID (5G): **PLANET_5G**

Encryption: **open**

Figure 3-2: Login Screen



Note

Administrators are strongly suggested to change the default admin and password to ensure system security.



The following password is based on the firmware version after **v1.2102b240829**.

Default IP address: **192.168.1.1**

Default user name: **admin**

Default password: **cg + the last 6 characters of the MAC ID in lowercase**

Default DHCP Server: **ON**


<Wireless Router>

Default SSID (2.4GHz): **PLANET_2.4G**

Default SSID (5GHz): **PLANET_5G**

Encryption: **open**

Find the MAC ID on your device label. The default password is "cg" followed by the last six lowercase characters of the MAC ID.

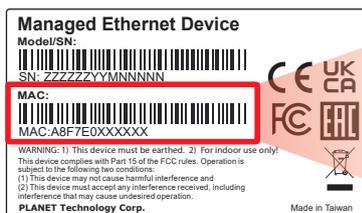

MAC ID: A8F7E0XXXXXX

Default Password: cgxxxxxx

("x" means the last 6 digits of the MAC address.

All characters should be in lowercase.)

Figure 3-3: VPN Router MAC ID Label



Figure 3-4: Login Screen



The following web screen based on the VR-100 is the same as the VR-Series.

After logging in, you will be prompted to change the initial password to a permanent one.

STEP 1 - Account Modification

1 Account 2 LAN 3 WAN 4 Security Settings 5 Setup Completed

Username

Password

Confirm Password

The password must contain 8~31 characters, including upper case, lower case, numerals and other symbols

Cancel Next

Figure 3-5: Create a New Password

Enter the default username and password, then set a new password according to the rule-based prompt and confirm it. Upon success, press any key to return to the login prompt. Log in with "admin" and the "new password" to access the Web interface.

Step 3: After entering the password, the main screen appears as shown in Figure 3-3.



Figure 3-6: Web-based Main Screen of Cellular Gateway

Now, you can use the Web management interface to continue the VPN Router management. Please refer to the user's manual for more.

Administrators are strongly suggested to change the default password and Wi-Fi SSID on the first login to safeguard system security.

4. Recovering Back to Default Configuration

■ IP address has been changed or admin password has been forgotten

To reset the IP address to the default IP address “**192.168.1.1**” or reset the login password to default value, press the hardware-based **reset button** on the front panel for about **10 seconds**. After the device is rebooted, you can log in the management Web interface within the same subnet of 192.168.1.xx.



Figure 4-1: VR-300 Series Reset Button

5. Appendix

Appendix A: Default Setting	
Default IP Address	192.168.1.1
Default Login User Name	admin
Default Login Password	admin
Default DHCP Server	On
Default LAN Port	Ethernet Ports 1~4
Default WAN Port	Ethernet Port 5
Default SSID (2.4G)	PLANET 2.4G
Default SSID (5G)	PLANET_5G

Appendix B: User's Manual				
User's Manual	VR-100			
				
	VR-300	VR-300P	VR-300W5	VR-300PW5
	VR-300W6A	VR-300PW6A	VR-300W6	VR-300PW6
	VR-300FW-NR			
				

6. Further Information

Thank you for purchasing PLANET VPN Router. The above steps introduce the simple configuration of the VPN Router. If you have other questions, please contact the local dealer where you purchased this product or you can contact PLANET directly at the following email address:

support@planet.com.tw.

Copyright © PLANET Technology Corp. 2024.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.